

Diagnostic Link Connector (DLC)


From January 2011

**Audi**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

erWin

Vehicle Electrical System Control Module, Data Bus on Board Diagnostic Interface, Diagnostic Connection

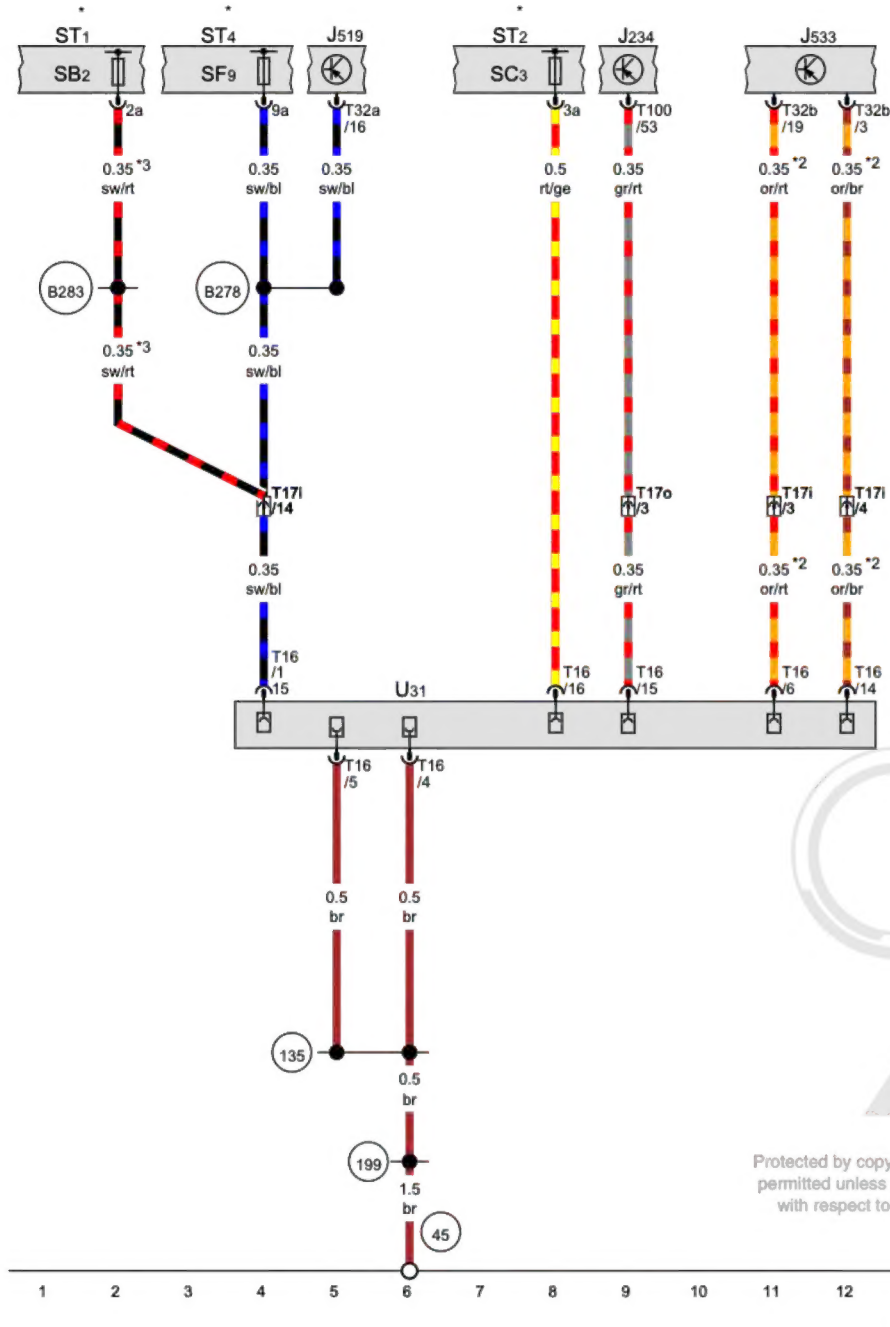

- J234 Airbag Control Module
- J519 Vehicle Electrical System Control Module
- J533 Data Bus on Board Diagnostic Interface
- ST1 Fuse Panel 1
- SB2 Fuse 2 (On Fuse Panel B)
- ST2 Fuse Panel 2
- SC3 Fuse 3 (On Fuse Panel C)
- ST4 Fuse Panel 4
- SF9 Fuse 9 (On Fuse Panel F)
- T16 16-Pin Connector
- T17i 17-Pin Connector, In the Left A-Pillar Connector Station
- T17o 17-Pin Connector, In the Connector Station, Right A-Pillar
- T32a 32-Pin Connector
- T32b 32-Pin Connector
- T100 100-Pin Connector
- U31 Diagnostic Connection
- 45 Ground Connection Behind Instrument Panel, Center
- 135 Ground Connection 2 (in Instrument Panel Wiring Harness)
- 199 Ground Connection 3 (in Instrument Panel Wiring Harness)
- B278 Positive Connection 2 (15a) (in Main Wiring Harness)
- B283 Positive Connection 7 (15a) (in Main Wiring Harness)
- * Refer to Applicable Wiring Diagram for Fuse Positions
- *2 Data Bus Wire (CAN Bus)
- *3 From June 2014

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.